



## Tire Maintenance

1. Check all 4 Nuts and Bolts on hub(s) and tighten regularly (if applicable).
2. Do NOT inflate if bolts are missing.
3. Check pneumatic tires for proper PSI.
4. USE HAND PUMP ONLY TO INFLATE TIRES
5. **WARNING** – Over inflation or the use of electronic air pumps/compressors may result in damage to the tire/wheel and could cause serious bodily injury.